




BOUNDMOTOR

BOUNDMOTOR ESC 6.1 FW:5.1

- Power button, hold to power on ;
- Single click to see boards battery ;
- Double click to change directions;

Gear button

- Single click to change speed
- Double click to see remotes battery

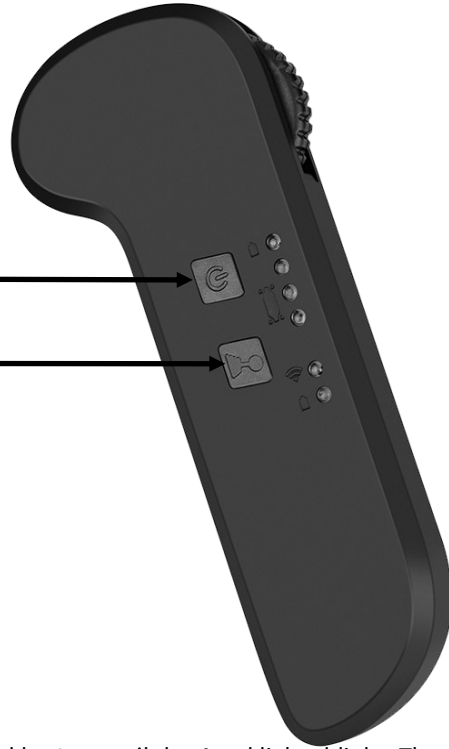

Instructions:

Pairing

To pair this remote with the Vesc, hold the power button with the second button until the 4 red lights blink. Then, turn on the Vesc with the power button (Vesc) and they should pair up automatically.

Reverse

To reverse, you double click the power button and it will change directions. If you are in using the compatible Vesc tool (1.29), you will have all the features with reversing.

Change speed mode

To change speed modes, you can press the bottom button. There are 3 speed modes in total: beginner, eco and pro, the speed modes are shown according to how fast the 4 lights travel, the slowest one is the beginner mode, vice versa.

The first 2 restricts the top speed of the board, allowing the user gradually get used to the speed before entering into Pro mode.

Battery indicator

To view your battery percentage, you can press the power button, 4 red lights indicates 100% to 1 light being 25%.

Automatically synchronize

Double click the power button, it will automatically synchronize the rotation direction of two side motors.

⚠ NOTE: DO NOT upgrade the firmware, if you do, some functionality will be lost, such as speed mode switching and direction switching. Use vesc tool 2.06 to customize your settings. Download link: <https://bit.ly/vescfile>

Battery Current Max: 30.00A

Motor Current Max: 100.00A

Program Guide: <https://boundmotor.com/how-to-program-vesc/>